415 230V



230V Electromechanical operator

Max width single leaf

2,5 - 4 m (with electric lock)

Use frequency

S3 - 30%



- "In-axis" thrust operator.
- Available in versions with a 300 mm (max leaf 3 m) and 400 mm (max leaf 4 m) rod stroke.
- Horizontal exit for cables to allow near to ground installation (low installation).



230V SAFEzone system: 415 230V + E045S or E145S + SAFEcoder



GREENtech 230V system: 415 230V + E045S or E145S



DIMENSIONS AND TECHNICAL S	PECIFICATIONS			
Model	415	415 L		
Power supply voltage	220-240V~ 50/60 Hz			
Electric motor	Asynchronous single phase			
Max. power	300 W			
Max expressed force	3000 N (*)			
Rod max speed	16 mm/s (*)			
Rod travel	300 mm	400 mm		
Max. leaf opening angle	110°			
Operating ambient temperature	-20°C ÷ +55°C			
Thermal protection	140°C			
Protection class	IP54			
Weight	7.8 Kg	8 Kg		
Use frequency	S3 - 30%			
Max. leaf width	2.5 m (3 m with electric lock)	3 m (4 m with electric lock)		
Mounting brackets	Rear attachment to be welded/screwed - front attachment to be welded			
Dimensions (LxDxH)	836 x 101 x 147 mm	942 x 101 x 148 mm		
Electronic equipment	Not included			

(*) data referred to 230V~ 50Hz.

Model Item code 415 104415 415 L 104417

PACKS

415 230V includes: an electro-mechanical operator, installation accessories, a release key, a 400V $8\mu F$ thrust capacitor.

Typical Installation Examples page. 321

ELECTRONIC CONTROL UNITS







E045S control unit Info at page 134

790076 790077

ACCESSORIES



Enclosure mod. L for electronic control units



Enclosure mod. E for electronic control units



Enclosure mod. LM for electronic control units

720119 720309

>>



Plate to be walled



SAFEcoder BUS magnetic absolute encoder (FAAC Patent)

737604 404040



BUS XIB interface (for E045 or E045S or E024S boards with photocell no BUS)

790062




Shaft cover for mod. 415 with rod stroke 300 mm

727525

720118

INSTALLATION DIMENSIONS (MM)

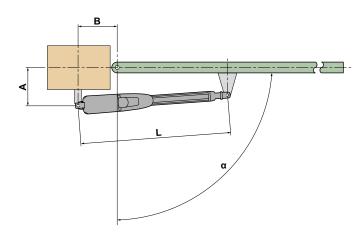

	α	Α	В	L
415	90°	145	145	1110
	110°	120	135	
415 L	90°	195	195	1290
	110°	170	170	1290

For any other configuration please refer to the technical manual

OTHER Accessories

Key operated buttons page 174

Safety edges page 185 Transmitters and receivers page 166 Photocells and columns page 182

Flashing lights page 191 Various accessories page 192