415 24V



24V Electromechanical operator

Max width single leaf

2,5 - 4 m (with electric lock)

Use frequency

Continuous use



- "In-axis" thrust operator.
- Available in versions with a 300 mm (max leaf 3 m) and 400 mm (max leaf 4 m) rod stroke.
- Horizontal exit for cables to allow near to ground installation (low installation).



24V SAFEzone system: 415 24V + E024S or E124



24V GREENtech system: 415 24V + E124



DIMENSIONS AND TECHNICAL SPECIFICATIONS					
Model	415 24 V	415 L 24V			
Power supply voltage	220-240V~ 50/60 Hz				
Electric motor	With brushes 24V ====				
Max. power	70 W				
Max expressed force	2800 N				
Rod max speed	16 mm/s				
Rod travel	300 mm	400 mm			
Max. leaf opening angle	110°				
Operating ambient temperature	-20°C ÷ +55°C				
Protection class	IP54				
Weight	7.8 Kg	8 Kg			
Use frequency	Continuous use				
Max. leaf width	2,5 m (3 with electric lock)	3 m (4 with electric lock)			
Mounting brackets	Rear attachment to be welded/screwed - front attachment to be welded				
Dimensions (LxDxH)	836 x 101 x 147 mm	942 x 101 x 148 mm			
Electronic equipment	Not included				

FAMILY MODELS Model Item code 415 24V 1044151 415 L 24V 1044171

PACKS

415 24V includes: an electromechanical actuator, installation accessories and a release key.

Typical Installation Examples page. 321

ELECTRONIC CONTROL UNITS



E024S Electronic control unit with enclosure Info at page 138



E124 Electronic control unit with enclosure Info at page 139

790286 790284

ACCESSORIES



XBAT 24 emergency battery kit *

390923



Emergency battery support kit ◆

390926



Plate to be walled

(specific for E124)

737604







790062

NOTE



Shaft cover for mod. 415 with rod stroke 300 mm


♦ The 2 Pb standard batteries are not supplied by FAAC and must have a

727525

It is not compatible with E124 control unit.

voltage/current of 12 V/4Ah. Dimensions: 90X70X108 mm

INSTALLATION DIMENSIONS (MM)

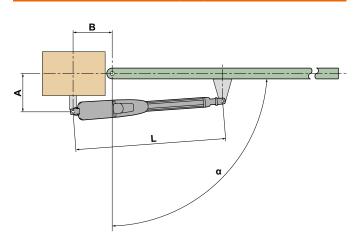

	α	Α	В	L
415	90°	145	145	1110
	110°	120	135	
415 L	90°	195	195	1290
	110°	170	170	

For any other configuration please refer to the technical manual

OTHER ACCESSORIES

Key operated buttons page 174

Safety edges page 185

Transmitters and receivers page 166

Photocells and columns page 182

Flashing lights page 191

Various accessories page 192